

Quick Installation Manual

 


Further instructions and CAN bus configuration visit our website at www.hubblelithium.co.za or scan the below link to our site.



Hubble Lithium
AM-2 5.5KW Lithium Battery




DIP switch settings for paralleling multiple battery packs

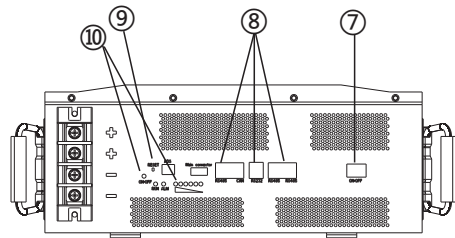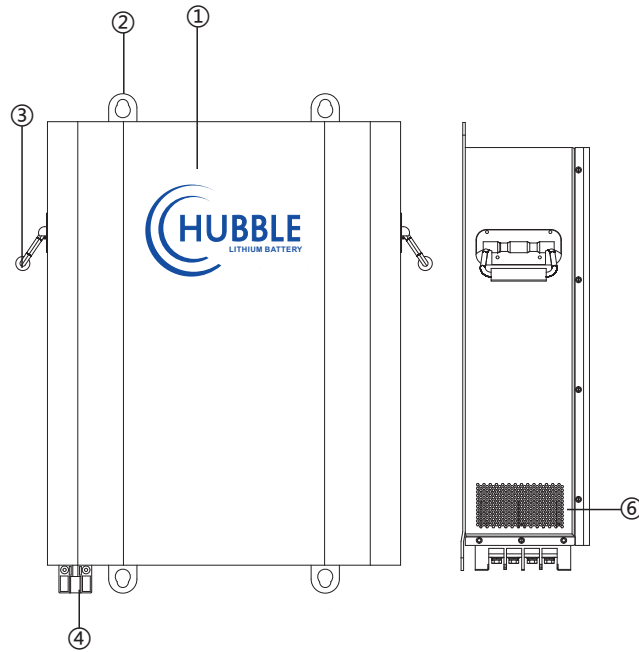

ADS	DIP Switch			
	#1	#2	#3	#4
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON

Before connecting the parallel cables ensure that you configure the DIP switch settings correctly first.

Some models come with a parallel network cable. If you do not have a included parallel network cable that came with the unit, you can use a normal computer network cable. Plug the cable into either of the 2 link ports on the right side and daisy chain the network cable to the next battery. Keep connecting until all the packs are connected. You can use either of the Link ports on the battery as they are both the same.

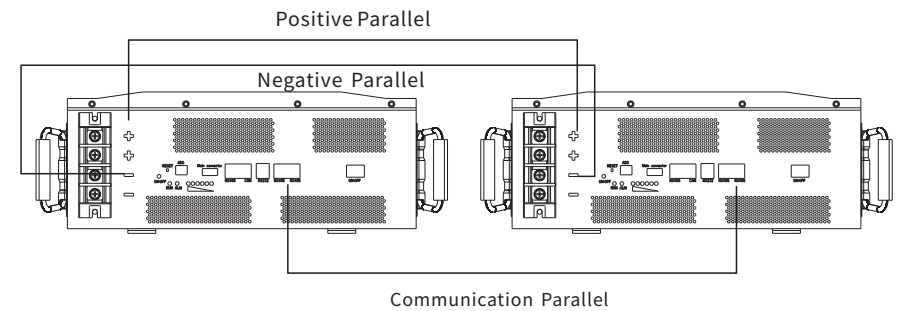

- ① Cover
- ② Hanging Ear
- ③ Handle
- ④ Output Terminal
- ⑥ Cooling Case
- ⑦ Power Switch
- ⑧ Communication Interface
- ⑨ Reset Switch
- ⑩ Led Lights