



THREE-PHASE HYBRID INVERTER



DATASHEET

SUN-8K-SG04LP3 / SUN-10K-SG04LP3 / SUN-12K-SG04LP3

Global Tech China Ltd, 3 Floor, Wai Yip Industrial Building.
171 Wai Yip Street, Kwun Tong, Kowloon, Hong Kong.
Tel: +852 2884 4318 Fax: +8522884 4816
www.sunsynk.com / sales@globaltech-china.com
www.globaltechhk.com

INDEX

1. PRODUCT INTRODUCTION	3
2. TECHNICAL SPECIFICATIONS	5
3. DISPLAY	7
3.1. HOME PAGE	8
3.2. STATUS PAGE	8
3.3. SYSTEM FLOW PAGE	9
3.4. SETUP PAGE	9
3.5. SET TIME (CLOCK)	10
3.6. SET COMPANY NAME / BEEPER / AUTO DIM	10
3.7. FACTORY RESET AND LOCK CODE	11
3.8. BATTERY SETUP PAGE	11
3.9. BATTERY DISCHARGE PAGE	12
3.10. SETTING UP A LITHIUM BATTERY	12
3.11. PROGRAM CHARGE / DISCHARGE TIMES	13
3.12. GRID SUPPLY VOLTAGE AND FREQUENCY – GRID SUPPLY PAGE	14
3.13. ADVANCED SETTINGS FOR PARALLELING INVERTERS (UNDER DEVELOPMENT)	14
3.14. SOLAR POWER GENERATED	15
3.15. GRID POWER	15
3.16. ADVANCED SETTINGS FOR WIND TURBINE	16
3.17. ADVANCED SETTINGS FOR AUXILIARY LOAD	17
3.18. FAULT CODES	17

1. PRODUCT INTRODUCTION

The Sunsynk Three-Phase Hybrid Inverter is a highly efficient power management tool that allows the user to hit those 'parity' targets by managing power-flow from multiple sources such as solar, mains power (grid) and generators, and then effectively storing and releasing power as and when utilities require.

INTERACTIVE

- Easy and simple to understand LCD display;
- Supporting Wi-Fi or GSM monitoring;
- Visual power flow screen;
- Built-in 2 strings for 1 MPP tracker and 1 string for 1 MPP tracker;
- Smart settable 3-stage MPPT charging for optimised battery performance;
- Auxiliary load function;
- Parallel (coming soon) / multi-inverter function: grid-tied and off-grid;

COMPATIBLE

- Compatible with mains electrical grid voltages or power generators;
- Compatible with wind turbines;
- 230V/400V Three-phase Pure Sinewave Inverter;
- Self-consumption and feed-in to the grid;
- Auto restart while AC is recovering;
- Maximum charging/discharging current of 190A (8kW), 210A (10kW), and 240A (12kW);
- DC and AC couple to retrofit existing solar system;
- Compatible with a 48V low-voltage battery;

CONFIGURABLE

- Fully programmable controller;
- Programmable supply priority for battery or grid;
- Programmable multiple operation modes: on-grid/off-grid & UPS;
- Configurable battery charging - current/voltage based on applications by LCD setting;
- Configurable AC / solar / generator charger priority by LCD setting;
- 6 time periods for battery charging/discharging;


SECURE

- Overload/over-temperature/short-circuit protection;
- Smart battery charger design for optimised battery protection;
- Limiting function installed to prevent excess power overflow to grid;
- Isolation transformer design;

APPLICATIONS

- Marine (vessel power management);
- Power shedding (home/office/factory);
- UPS (fuel-saving systems);
- Remote locations with solar and wind generators;
- Building sites;
- Telecommunication;

The following diagram explains the basic application and architecture of this 3-Phase Inverter. The system is composed of solar panels, batteries, a generator or utility grid, normal loads, smart loads and monitoring systems.

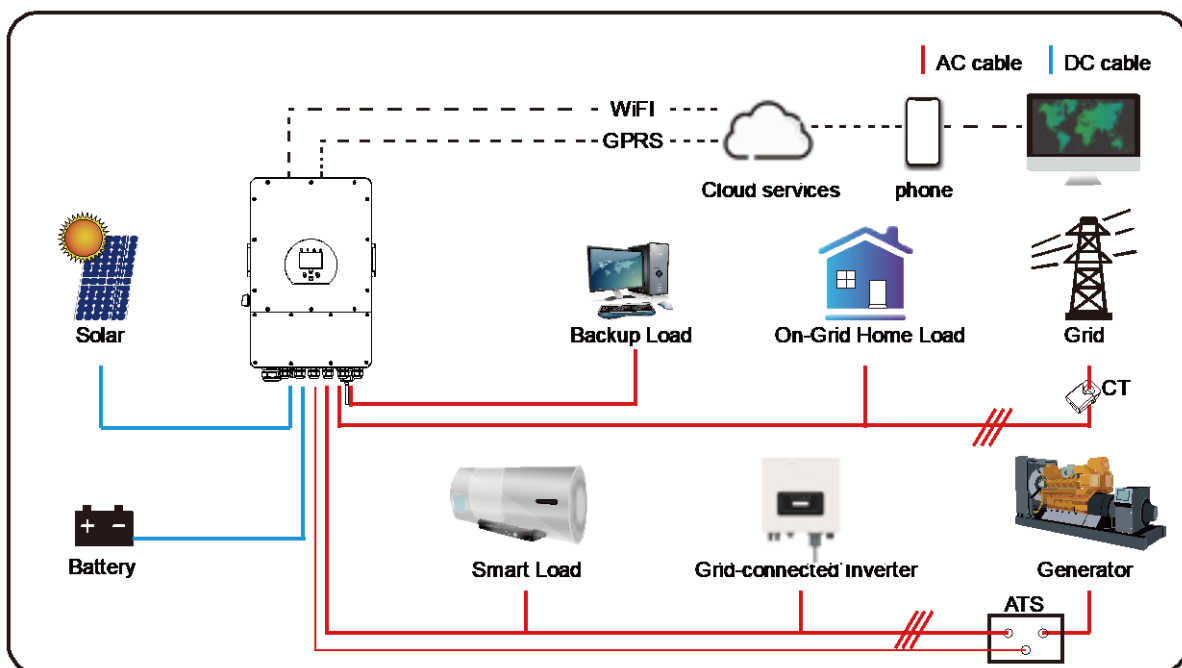

2. TECHNICAL SPECIFICATIONS

Model	SUN-8K-SG01LP3		SUN-10K-SG01LP3		SUN-12K-SG01LP3	
Battery Input Data						
Battery Type	Lead-acid or Lithium-ion					
Battery Voltage Range	40~60V					
Max. Charging Current	190A	210A		240A		
Max. Discharging Current	190A	210A		240A		
Charging Curve	3 Stages/Equalization					
External Temperature Sensor	Optional					
Charging Strategy for Li-Ion Battery	Self-adaption to BMS					
PV String Input Data						
Max. DC Input Power	9880W	13000W		15000W		
PV Input Voltage	450V (140V~1000V)					
MPPT Range	140V~800V					
Start-up Voltage	160V					
PV Input Current	12.5A+12.5A	25A+12.5A		25A+12.5A		
No. of MPPT Trackers	2					
No. of Strings Per MPPT Tracker	1+1	2+1		2+1		
AC Output Data						
Rated AC Output and UPS Power	8000W	10000W		12000W		
Max. AC Power	8800W	11000W		13200W		
Peak Power (off-grid)	2 times of rated power, 10 S					
AC Output Rated Current	11.6A	14.5A		17.4A		
Max AC Output Current	12.8A	16A		19.1A		
Max Continuous AC Passthrough	60A	60A		60A		
Output Frequency and Voltage	50-60Hz; 230/400Vac (Three Phase)					
Grid Type	Three Phase					
Current Harmonic Distortion	THD<3% (Linear load<1.5%)					
Efficiency						
Max. Efficiency	97.6%					
MPPT Efficiency	97.0%					
Euro Efficiency	99.9%					
Protection						
PV Arc Fault Detection	Integrated (Except European Type)					
PV Input Lightning Protection	Integrated					
Anti-islanding Protection	Integrated					
PV String Input Reverse Polarity Protection	Integrated					
Insulation Resistor Detection	Integrated					
Residual Current Monitoring Unit	Integrated					
Output Over Current Protection	Integrated					
Output Shorted Protection	Integrated					
Output Over Voltage Protection	Integrated					
Surge Protection	DC Type II / AC Type II					
Certifications and Standards						
Grid Regulation	UL1741, IEEE1547, RULE21, VDE0126, AS4777, NRS2017, G98,G99, IEC61683, IEC62116, IEC61727					
Safety Regulation	IEC2109-1, IEC62109-2					

EMC	EN61000-6-1, EN61000-6-3, FCC 15 Class B
General Data	
Operating Temperature Range	-25~60°C, >45°C Derating
Cooling	Fan
Noise	<30dB
Communication with BMS	RS485; CAN
Weight	45kg
Size (Length x Width x Height)	673 x 462 x 265mm
Protection Degree	IP65
Installation Style	Wall-mounted
Warranty	5 years

3. DISPLAY




LED indicator		Meaning
DC	Green LED solid light	PV connection normal
AC	Green LED solid light	Grid connection normal
Normal	Green LED solid light	Inverter functioning normally
Alarm	Red LED solid light	Fault

Function Key	Description
Esc	To exit the previous mode
Up	Increase the value of a setting
Down	Decrease the value of a setting
Enter	Confirm setting change (If not pressed each time the setting will not be saved)

3.1. Home Page

Press the Esc button in any page to access the Home Page:

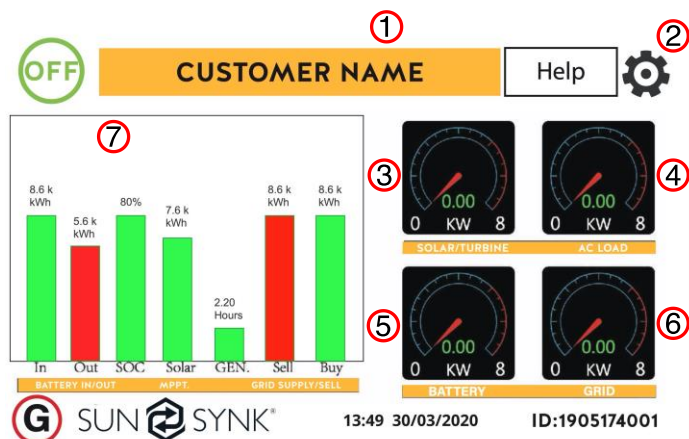

1. Customer name
2. Access settings menu page
3. Access solar history
4. Access system status page
5. Access system status page
6. Access grid history
7. Access system flow page

What this page displays:

- Total daily power into the battery (kWh).
- Total daily power out of the battery (kWh).
- SOC (State of charge of the battery) (%).
- Total daily solar power produced in (kWh).
- Total hourly usage of the generator (Time).
- Total daily power sold to the grid (kWh).
- Total daily power bought from the grid (kWh).
- Real-time solar power in (kW).
- Real-time load power in (kW).
- Real-time battery charge power in (kW).
- Real-time grid power in (kW).
- Serial number.
- Time date.
- Fault condition.
- Access stats pages.
- Access status page.
- Access fault diagnostic page.

3.2. Status Page

To access the Status page, click on the BATTERY or AC LOAD dial on the Home page.

What this page displays:


- Total solar power produced.
- MPPT 1 power/voltage/current.
- MPPT 2 power/voltage/current.
- Grid power.
- Grid frequency.
- Grid voltage.
- Grid current.
- Inverter power.
- Inverter frequency.
- Inverter voltage.

0 W		0 W 0.0HZ		333W 50.0HZ	
220V	110W	33V	0.0A	219V	0.9A
220V	112W	31V	0.0A	220V	0.9A
221V	104W	29V	0.2A	220V	0.9A
Load		HM:	LD:	INV_P:	DC_T:
SOC: 67%		0W	0W	110W	38.0C
382W		0W	0W	112W	AC_T:
		0W	0W	111W	44.4C
BAT_V:51.72 V		Grid Power		Inverter Power	
BAT_I: 7.40 A		DC_P21: 0W		DC_P2: 0W	
BAT_T:-100.0C		DC_V1: 0V		DC_V2: 0V	
Battery		DC_I1: 0.0A		DC_I2: 0.0A	
		Solar Power 1		Solar Power 2	

- Inverter current.
- Load power.
- Load voltage.
- Battery power charge/discharge.
- Battery SOC.
- Battery voltage.
- Battery current.
- Battery temperature.

3.3. System Flow Page

Access by clicking on the bar chart on the Home Page.

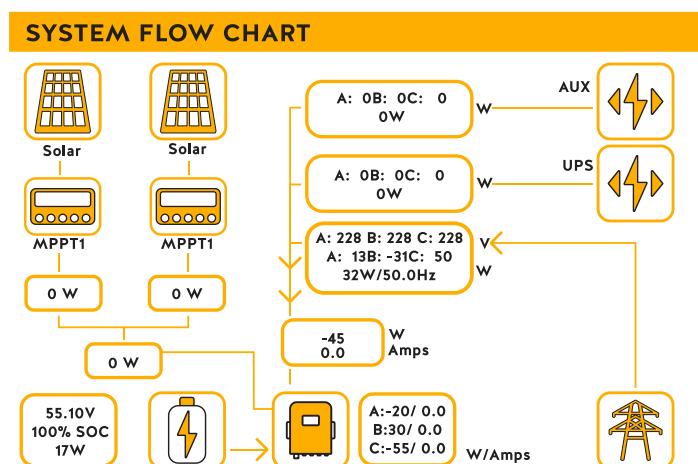

What this page displays:


- The system flow.
- MPPTs power.
- Battery status.
- Power distribution to load or grid.

3.4. Setup Page

To access the Settings, click on the gear icon



on the right top of the navigation menu.

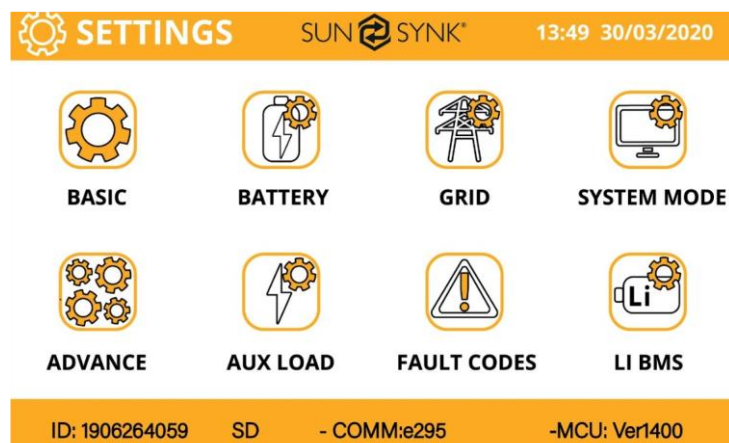

What this page displays:

- Serial number.
- Software version.
- Time, Date, and MCU.

What you can do from this page:

- Access the Basic Setup Page (press the BASIC icon).
- Access the Battery Setup Page (press the BATTERY icon).
- Access the Grid Setup Page (press the GRID icon).
- Access the real-time programmable timer/system mode (press the SYSTEM MODE icon).
- Access the advanced settings such as Wind Turbine (press the ADVANCE icon).
- Access the auxiliary load/smart load settings (press the AUX LOAD icon)
- Access the fault code register (press the FAULT CODES icon).
- Set up Li BMS (press the LI BMS icon).

3.5. Set Time (Clock)

To set time, click on the BASIC icon and then on 'Time'.

Basic Setup Help

Time Display Reset

☐ Sync

Year: 2018 Month: 10 Day: 24

Hour: 01 Minute: 53 Second: 17

☐ AM/PM

Cancel OK

What this page displays:

- Time.
- Date.
- AM/PM.

What you can do from this page:

- Adjust / set time.
- Adjust / set date.
- Adjust / set AM/PM.

3.6. Set Company Name / Beeper / Auto dim

To set company name click on the BASIC icon and then on 'Display'.

Basic Setup Help

Time Display Reset

Set Company name

M Y C O M P A N Y

ABCDEFGHIJKLMNOPQRSTUVWXYZ1234567890.-

Beeper On / Off ☐ Auto Dim Sec ☐

Cancel OK

What this page displays:


- Beeper status (ON/OFF).
- Installers names.

What you can do from this page:

- Set up your company name.
- Switch the beeper ON or OFF.
- Set the LCD backlight to auto dim.

3.7. Factory Reset and Lock Code

To set time, click on the BASIC icon and then on 'Reset'.

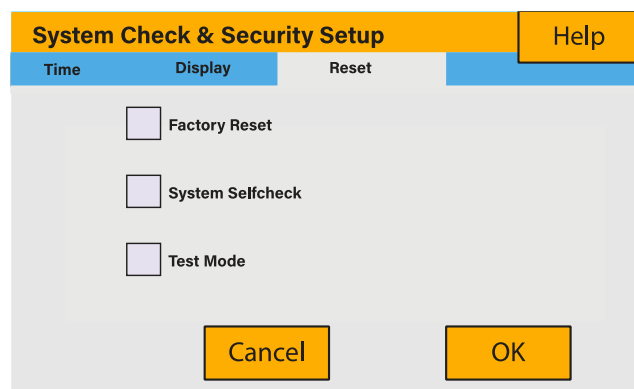

What this page displays:


- Reset status.
- Whether the 'lock code' is used or not.

What you can do from this page:

- Reset the inverter to the factory settings.
- System diagnostics.
- Change or set the 'lock code'.

3.8. Battery Setup Page

To configure battery settings, click on the BATTERY icon and then on 'Batt type'.

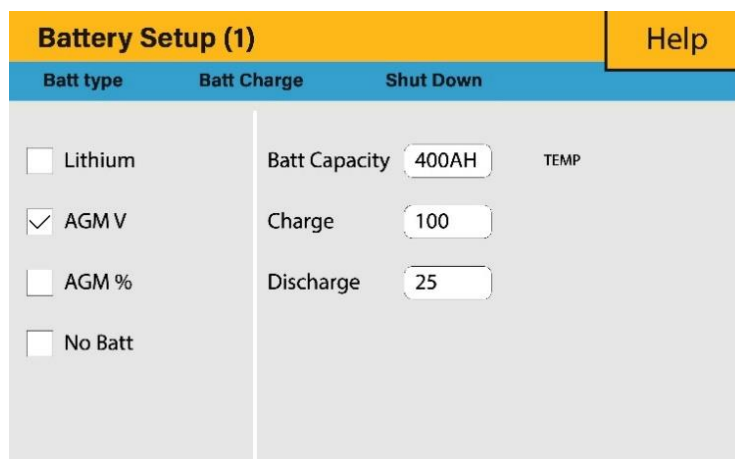

What this page displays:

- Battery capacity in (Ah) – For non-BMS-batteries the range allowed is 0-2000Ah, while for lithium-ion the inverter will use the capacity value of the BMS.
- Max battery charge current (Amps).
- Max battery discharge current (Amps), which should be 20% of the Ah rating for AGM only. For Lithium, please refer to the battery manufacturer documentation. **Note:** This is a global max. discharge current for both 'grid-tied' and 'backup' modes of operation and if the current exceeds this value inverter will shut down with an overload fault.
- TEMPCO settings - Temperature coefficient is the error introduced by a change in temperature.

What you can do from this page:

- Use battery voltage for all settings (V).

- Use battery SOC for all settings (%).
- No battery: tick this box if no battery is connected to the system.
- BMS setting.
- Active battery - This feature will help recover a battery that is 100% discharged by slowly changing from the solar array. Until the battery reaches a point where it can change normally.

3.9. Battery Discharge Page

To configure inverter's shutdown settings, click on the BATTERY icon and then on 'Shut Down'.

What this page displays:

- Inverter shutdown voltage set as either a voltage or %.
- Inverter low battery warning set as either a voltage or %.
- Restart voltage set as either a voltage or %.

What you can do from this page:

- Adjust battery shut down (voltage or %)
- Adjust low battery warning (voltage or %)
- Adjust restart (voltage or %)

3.10. Setting Up a Lithium Battery

To set up a lithium-ion battery, click on the BATTERY icon and visit the 'Batt Type' column.

What this page displays:

- This information will only display if the 'Lithium' option is selected under 'Batt Type'.
- The type of communication protocol.
- Approved batteries.

What you can do from this page:

- Set up your lithium battery.

3.11. Program Charge / Discharge Times

To set 'Charge' and 'Discharge' times, click on the 'System Mode' icon after clicking on the gear icon.

The image displays two screenshots of the 'SYSTEM MODE' configuration interface. The left screenshot shows the 'System 2' tab selected, with a table for setting charge/discharge times and checkboxes for 'Grid' and 'Gen'. The right screenshot shows the 'System 1' tab selected, with checkboxes for 'Zero Export', 'Solar Export', 'Limit to Load Only', and 'Priority Load', along with input fields for 'Zero Export Power' and 'Max Sell Power'.

Time Start	Time End	Power	SOC/V	Grid	Gen

Use Timer ☐

OK Cancel

Zero Export ☐ Priority Load ☐

Solar Export ☐

Limit to Load Only ☐

Zero Export Power

Max Sell Power

OK Cancel

What this page displays:

- A setting to prevent the inverter exporting power to the grid - 'Zero Export'.
- The ability to limit power supply to only the household loads - 'Solar Export'.
- Set the power limits to supply only the loads connected to the LOAD port - 'Priority to Load Only'.

What you can do from this page:

- Set a real time to charge or discharge the battery.
- Choose to charge the battery from the grid or generator.
- Limit export power to the grid.
- Set the unit to **charge** the battery from the grid or generator ticking 'Grid' or 'Gen' and set what times this needs to occur.
- Set the time to **discharge** the unit to the load or export to the grid by unticking 'Grid' and 'Gen'.

3.12. Grid Supply Voltage and Frequency – Grid Supply Page

On the Settings Menu, click on the GRID icon.

What this page displays:

- Grid frequency setting
- Grid type (normally 230V three-phase)

What you can do from this page:

- Change grid's frequency setting (normally 50 Hz)
- Set the Maximum Grid Input Voltage ('Grid Vol High')


- Set the Minimum Grid Input Voltage ('Grid Vol Low')
- Set the Maximum Grid Frequency ('Grid Hz High')
- Set the Minimum Grid Frequency ('Grid Hz Low')
- ✓ Select the correct Grid Type in your local area, otherwise the machine will not work or be damaged.
- ✓ Select the correct Grid Frequency in your local area.

Vol

3.13. Advanced Settings for Paralleling Inverters (UNDER DEVELOPMENT)


3.14. Solar Power Generated


This page shows the daily, monthly, yearly, and total solar power produced. Access this page by clicking on the 'Solar/Turbine' icon on the Home Page.

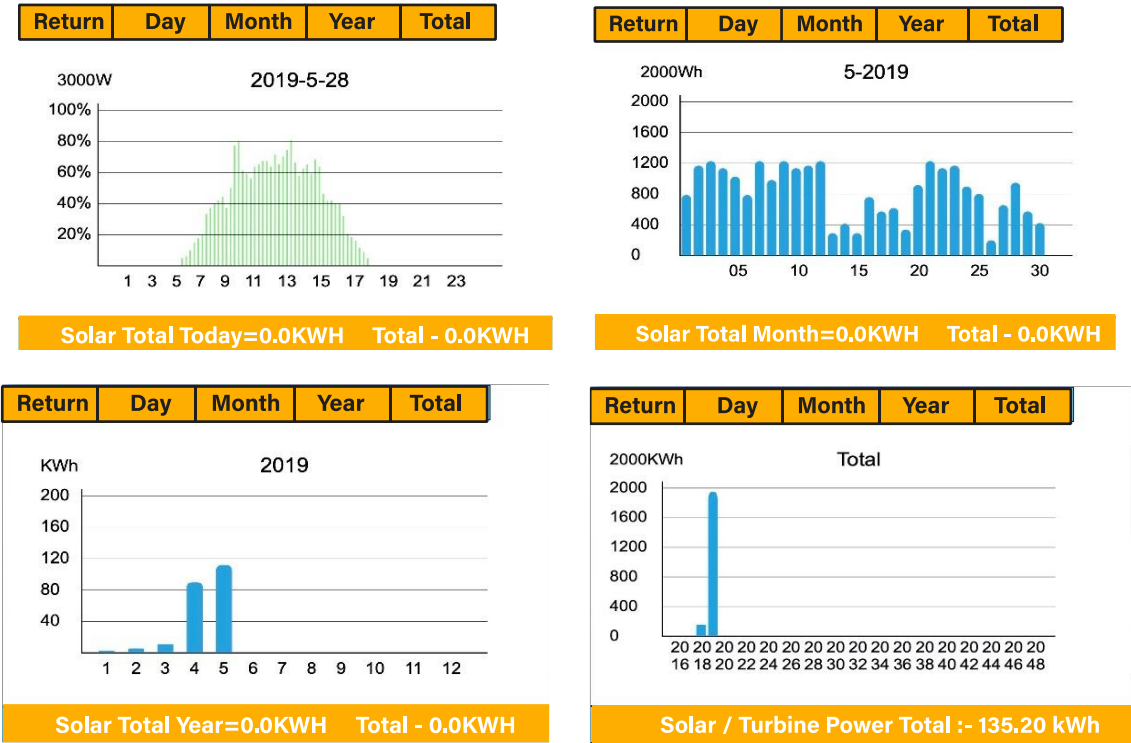


3.15. Grid Power

This page shows the Daily / Monthly / Yearly and total grid power export or consumed. Access this page by clicking on the 'Solar/Turbine' icon on the home page.

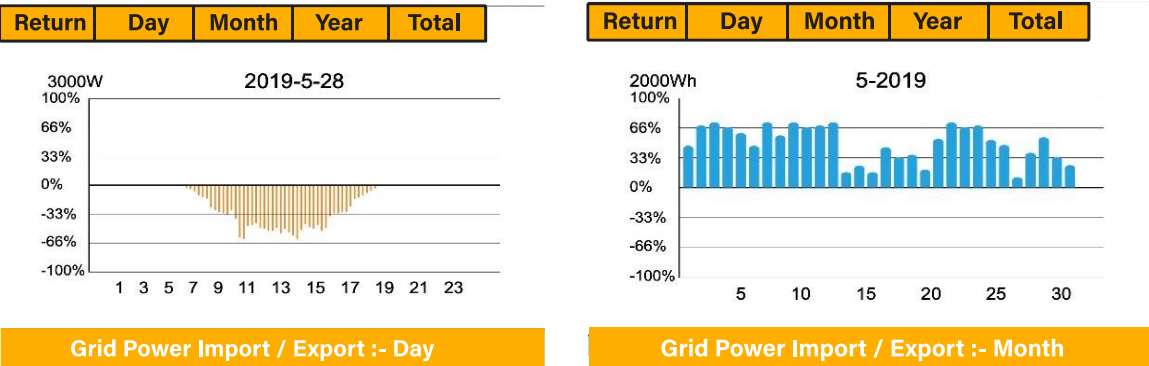

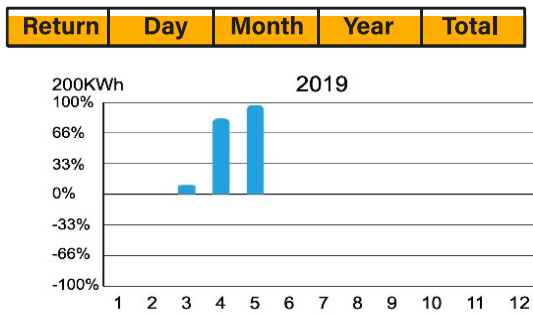

Grid Power Import / Export :- Year

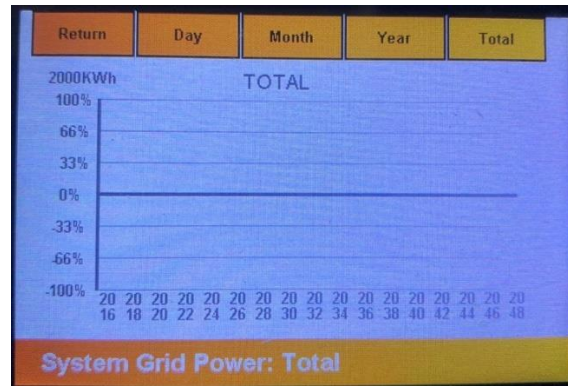

System Grid Power: Total

3.16. Advanced Settings for Wind Turbine

To configure wind turbine settings, click on the ADVANCE icon.

What this page displays:

- If one or both of the MPPTs are connected to a wind turbine.

What you can do from this page:

- Select the MPPT to be used as a turbine input.

Advance (2)

Help

Wind Turbine

Multi-inverter

☐ DC1 for WindTurbine
 ☐ DC2 for WindTurbine

V1	0V	0.0A
V2	0V	0.0A
V3	0V	0.0A
V4	0V	0.0A
V5	0V	0.0A
V6	0V	0.0A
V7	0V	0.0A
V8	0V	0.0A
V9	0V	0.0A
V10	0V	0.0A
V11	0V	0.0A
V12	0V	0.0A

OK

Cancel

3.17. Advanced Settings for Auxiliary Load

To configure Auxiliary Load (previously known as “smart load”) settings, click on the AUX LOAD icon.

AUX Load

Help

☐ Gen input

☐ Gen peak shaving power

1000W

☐ Aux load output

☐ For Micro inverter input

☐ MI Zero Export

Aux Load OFF Batt

95%

Aux Load ON Batt

100%

Solar Power(W)

1000W

Cancel

OK

What this page displays:

- Use of the Gen (Aux) input or output.

What you can do from this page:

- Set up a generator input.
- Set up an auxiliary (smart) load.
- Set up Peak Power Shaving.
- Use an additional inverter or micro inverter.

3.18. Fault Codes

To check te fault codes click on the FAULT CODES icon on the settings menu.

Fault Codes		Help ?
Alarms	Occurred	
F56 DC_VoltLow_Fault	2018-10-24 01:07	
F56 DC_VoltLow_Fault	2018-10-24 01:07	
F56 DC_VoltLow_Fault	2018-10-24 01:00	
F56 DC_VoltLow_Fault	2018-10-24 00:55	
F56 DC_VoltLow_Fault	2018-10-24 00:43	
F56 DC_VoltLow_Fault	2018-10-24 00:10	
F56 DC_VoltLow_Fault	2018-10-24 00:08	
F56 DC_VoltLow_Fault	2018-10-24 00:07	

Sunsynk Limited & Global Tech China Ltd,
3 Floor, Wai Yip Industrial Building.
171 Wai Yip Street, Kwun Tong,
Kowloon, Hong Kong.
Tel. HK +852 2884 4318 Fax: +852 2884 4816
Tel. UK +44 151 528 9945
Tel. SA +27 1108 39837
sales@globaltech-china.com

Audio Training manuals on Apple Pod Cast and Spotify
Full training support, manuals and videos on www.sunsynk.com



Global Tech China Ltd

3rd Floor, Wai Yip Street Kwun Tong, Kowloon, Hong Kong

Want to become a distributor? Or want to know more?

Email us: sales@globaltech-china.com Our website: www.sunsynk.com

GT website: www.globaltechchina.com

